

Florestone Tub / Showers Installation Instructions

FLORESTONE TUB / SHOWERS SHOULD BE INSTALLED BY A PROFESSIONAL PLUMBING CONTRACTOR.

FRAMING

Complete two sides of the squared and framed pocket according to dimensional drawings




Dimensions may vary $\pm 1/4$ " inch- check unit before installation.

Some Florestone units are too large to pass through doorways. Make sure the unit is in the installation area before framing is completed.

*Note on Code Compliance:

Since local codes and regulations vary, Florestone Products will not be responsible for code compliance. Please check with your local city and county building departments for specific regulations or restrictions before ordering.

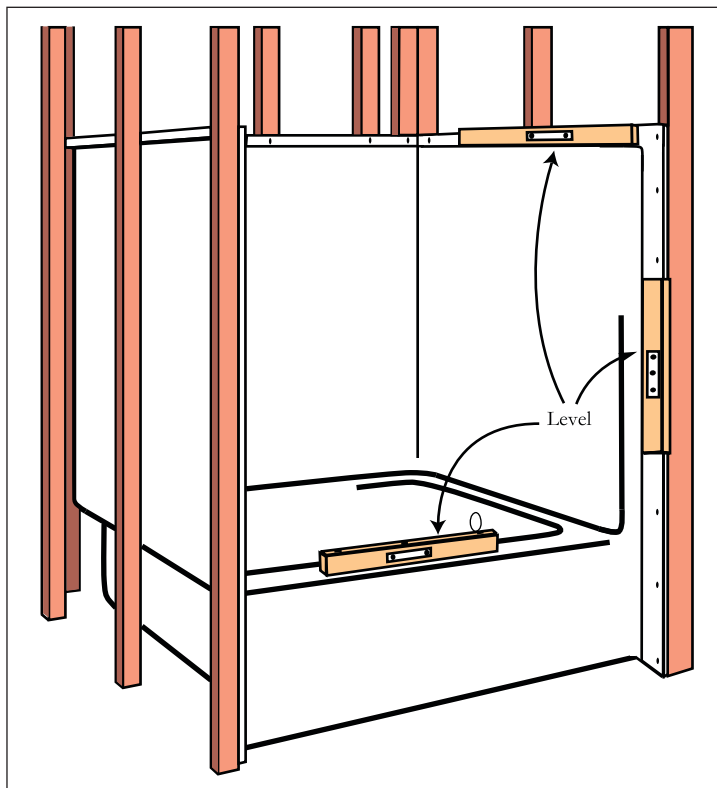

SETTING SHOWER / BATH UNIT

Install unit into position with front apron firmly on the floor. Use a level (3/4 min.) on the offset of front and side faces. Level top ledge of dam. Plumb and level shim if necessary. Mortar or plaster base is recommended.

SECURE UNIT

Fasten back and sidewall flanges to studs with large-headed #6 galvanized nails. Use #12 sheet metal screws for installation into steel studs.

ROUGH PLUMBING

Rough plumbing must extend above sub-floor or slab 1". Lay out accurate location of valves and, working from unfinished side of unit, drill 9/16" holes. From finished side of unit enlarge holes with a hole saw. For large openings use a saber saw. Because the one-piece construction eliminates the possibility of reaching over the tub end to connect the drain and overflow, unit should be located to provide access through the walls to make connections. Check for leaks before installing drywall and closing off plumbing access. With fire rated walls, finished wall board must be in place before units are installed.

CAULK

Caulk all openings around valves and outlets with a silicone caulking.

CLEANING

Clean up with liquid detergent and warm water.

AVOID USING ABRASIVE CLEANERS.

They may scratch and dull the surface of the unit.